


Chapter 3 LOCATION AND CONTROL

3.1 Front Panel Controls

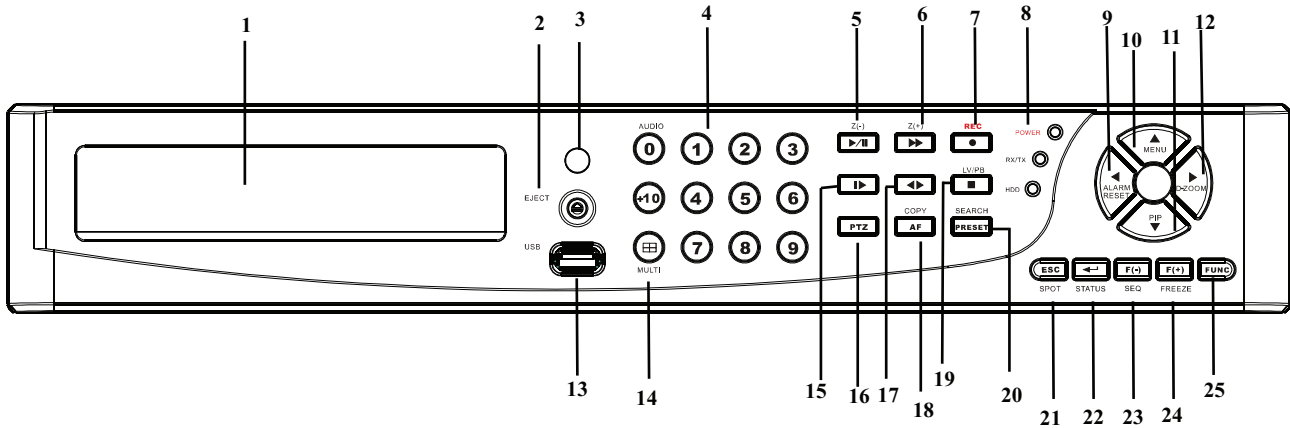

Item		Description
1	DVD-RW	A DVD-RW drive is installed in the front bay. (sold separately)
2	EJECT	Press EJECT button to open/close the DVD-RW drive.
3	IR RECEIVER	Infrared signal receiver for the IR remote controller. Do not block the receiver as a clear line of sight is required for proper operation.
4	NUMERIC BUTTON / CHANNEL SELECT	(a) selects a specific channel number to be displayed in full screen (b) enter the numeric password when prompted (c) number 0 for audio function
5	PLAY / PAUSE (▶/) / Z(-)	(a) Starts the playback of recorded data. By default, the playback starts from the earliest recording. (b) Toggles between playback and pause mode (c) Zoom out (PTZ mode)
6	FAST (▶▶) / Z(+)	(a) Fast forward. Press this button repeatedly to toggle between 2X normal playback speed through 128X normal playback speed. (b) Zoom in (PTZ mode) (c) Playback forward, picture by picture.
7	RECORD (●)	This button starts and stops the recording mode.
8	STATUS LED	Displays the status of the DVR (standby), HDD read/write and network transmission.